



Department of Building Services  
301 E Clinton Street  
Frankfort IN 46041  
(765) 654-5278

## FENCES

### Standard Procedure:

1. Call 811 & have area marked for utilities.
2. Schedule "Pre-Permit Inspection" by calling (765) 654-5278
  - a. Have proposed area clearly marked
3. Call Building Services to schedule Permit pick up time.
4. BRING WITH YOU FOR PICK UP:
  - a. \$20 cash (exact change) or check only
  - b. Site plan- shows where fence will be in relation to home/ property lines/ Right-of-Ways (streets/ alleys)- SEE BACK PAGE FOR EXAMPLE
5. Call for inspections- noted on permit
  - a. Post holes should be at least 32 inches


## VALLA

### Procedimiento estándar:

1. Llame al 811 y marque el área para servicios públicos.
2. Programe la "Inspección previa al permiso" llamando al (765) 654-5278
  - a. Tener el área propuesta claramente marcada
3. Llame al inspector de edificios para programar la recolección del permiso.
4. Traiga con usted para obtener el permiso de construcción:
  - a. \$ 20 en efectivo (solo cambio exacto) o cheque
  - b. Plano del sitio: muestra dónde estará la cerca en relación con las líneas de la casa / propiedad/ Derecho-de-paso (calles/ callejones)
5. Llama para las inspecciones, anotado en el permiso
  - a. Los agujeros del poste deben ser de 32 pulgadas

**PLEASE SEE BACK PAGE FOR EXAMPLE DRAWING  
POR FAVOR VEA LA PÁGINA POSTERIOR PARA EL DIBUJO DE EJEMPLO**

# EXAMPLE SITE PLAN

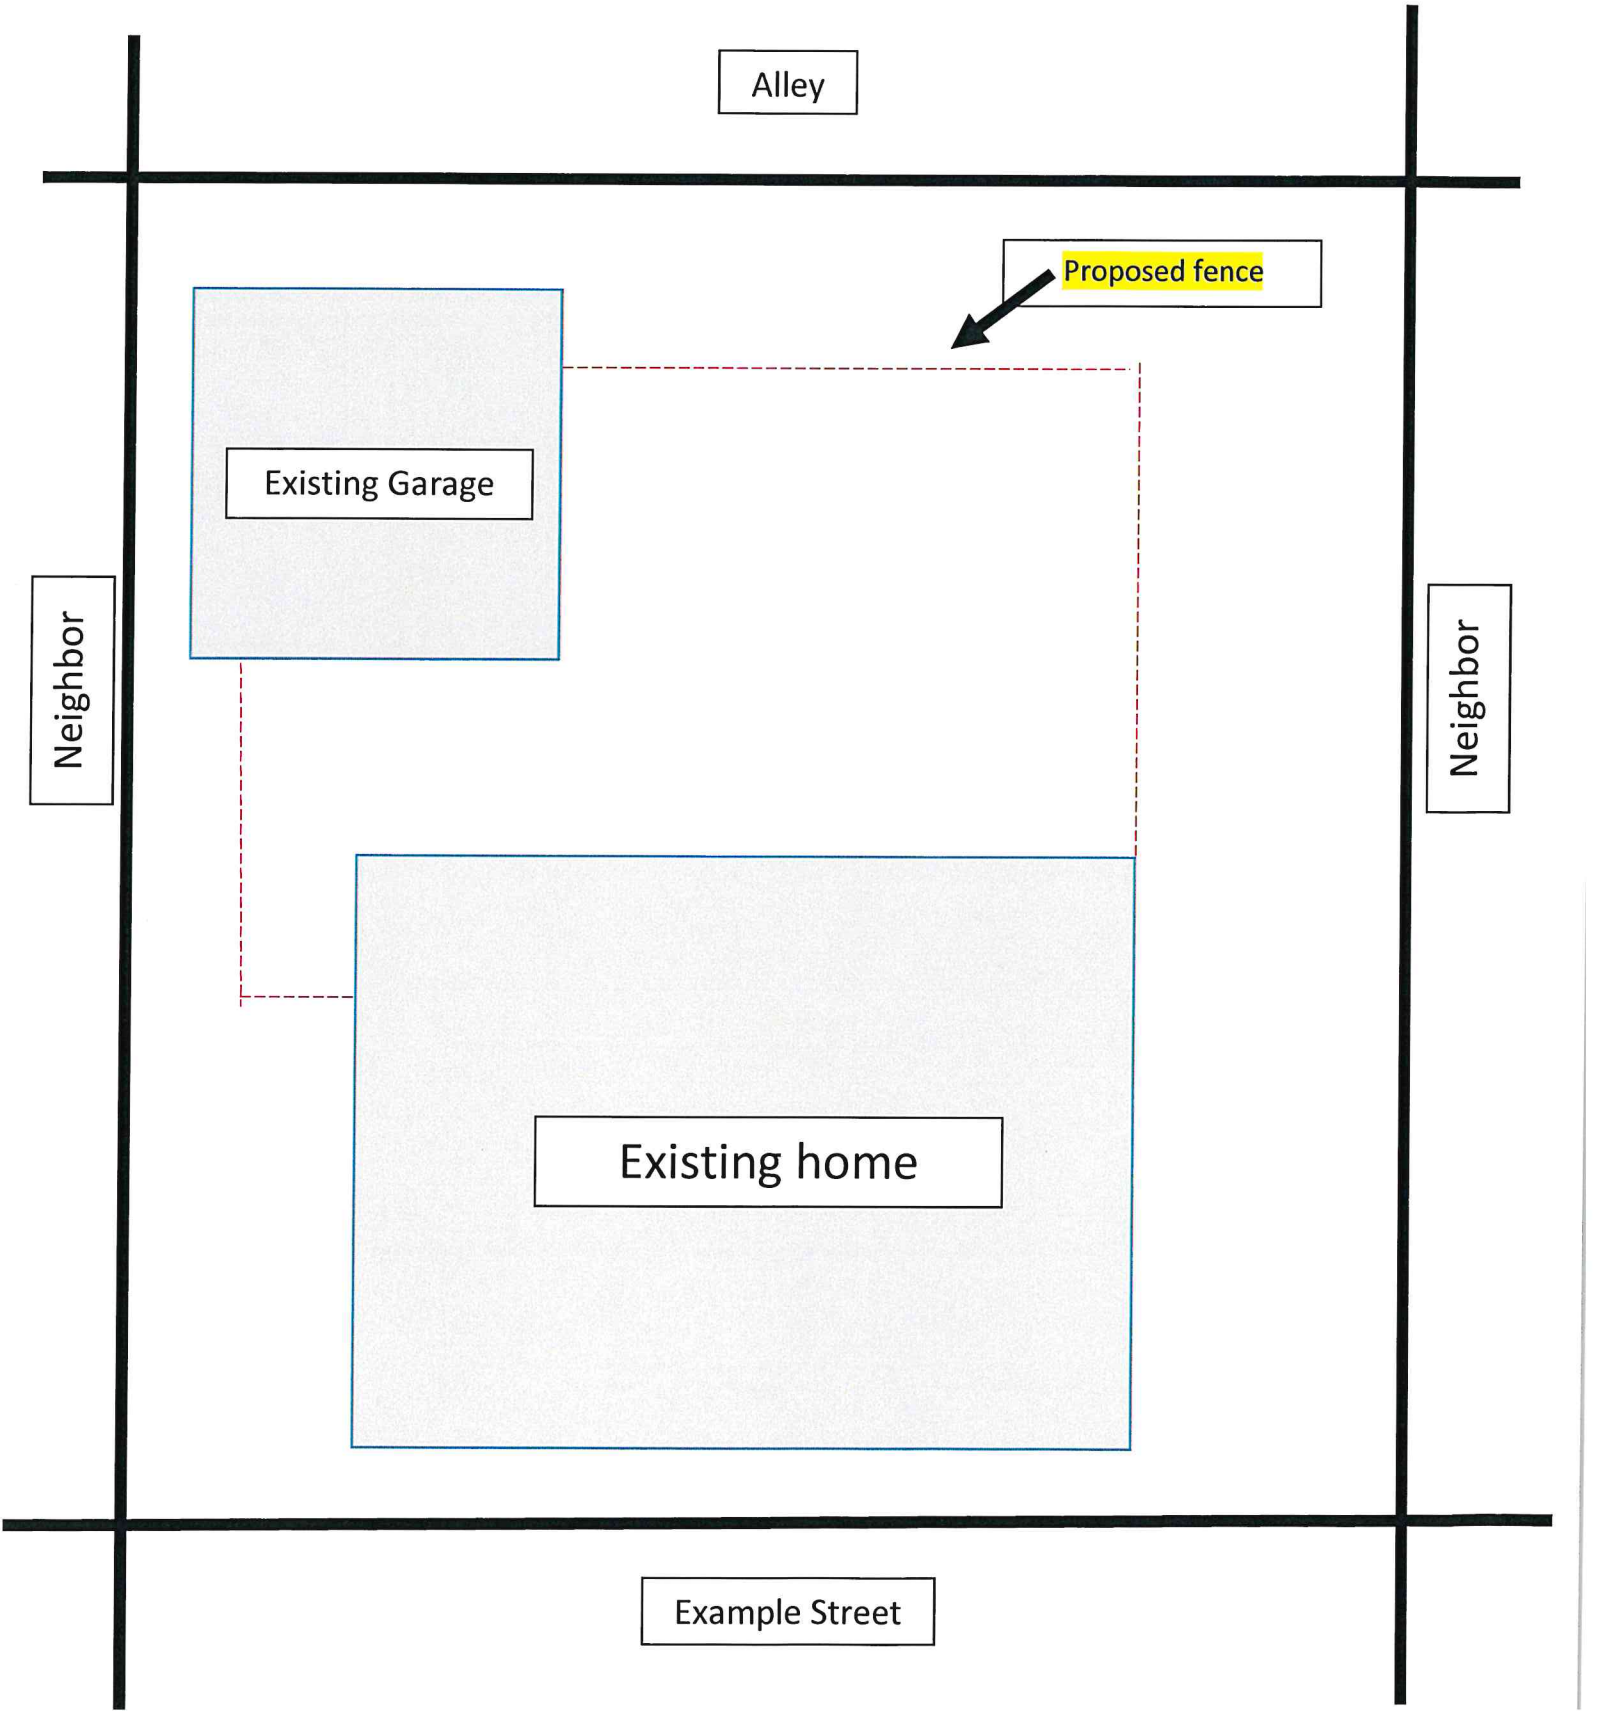

Alley

Proposed fence

Existing Garage

Neighbor

Neighbor

Existing home

Example Street